(10) Removal of Scanner Motor M2

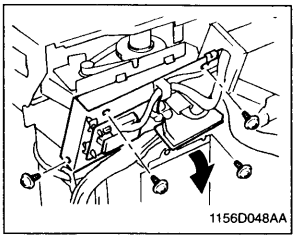

1. Remove the Right Cover, Rear Cover, and Rear Upper Cover.
2. Remove four screws to free PWB-F.

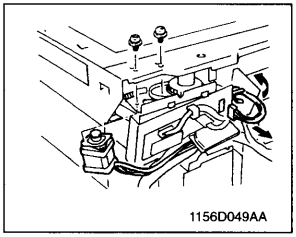

3. Unplug one connector. Then, remove the edge cover with a lock and the harness.
4. Remove four screws and Scanner Motor M2.