



9. Remove two screws and the Cleaning Blade.

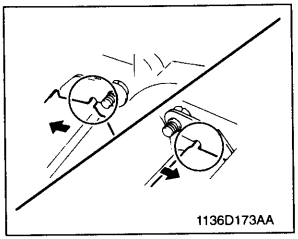


NOTE

When reinstalling the Cleaning Blade, press the blade tightly up against the mounting bracket.

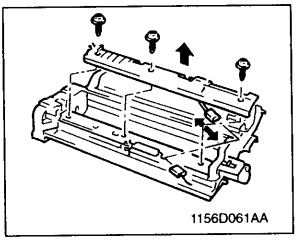

10. Unplug one connector.
11. Remove three screws and the PC Drum Paper Separator Finger Holder Assy.

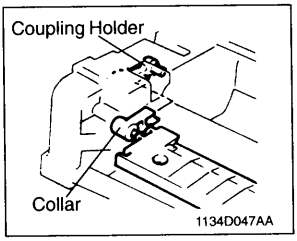

NOTE

When reinstalling the PC Drum Paper Separator Finger Holder Assy, fit the collar of the assy onto the coupling holder in the rear.