(9) Replacement of the Starter

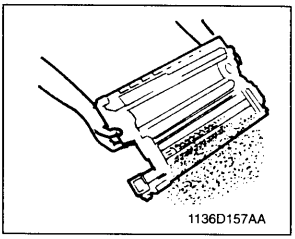

1. Dump the developer out of the Developing Unit.

2. Turning the Bucket Roller, pour fresh starter evenly into the chamber.

NOTE

Shake the packet of starter well before opening it.

NOTE

When the starter has been replaced, reset the count of "Starter" of the "Port/Option" counters of the Tech. Rep. mode and then make the ATDC adjustment. (For the ATDC adjustment, see p. D-69.)

