

(13) Removal of Main Erase Lamp LA3

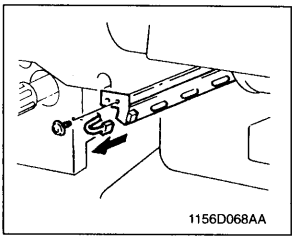


1. Swing down the Front Door.
2. Unplug one connector.
3. Remove one screw and Main Erase Lamp LA3.

(14) Cleaning of the Main Erase Lamp Filter

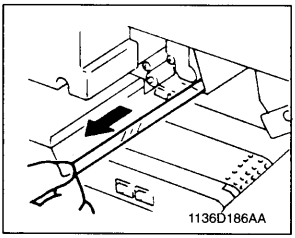


1. Swing down the Front Door.
2. Remove the Main Erase Lamp Filter.

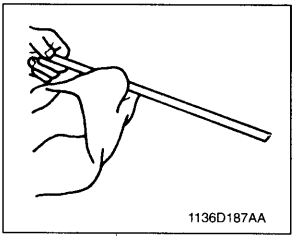


3. Using a soft cloth dampened with alcohol, wipe clean the Main Erase Lamp Filter.

(15) Cleaning of Image Erase Lamp LA2

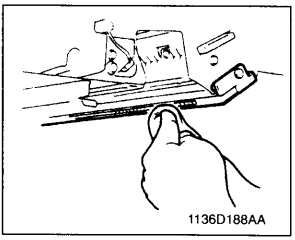

1. Swing down the Front Door.
2. Remove the IU.
3. Using a soft cloth dampened with alcohol, wipe clean Image Erase Lamp LA2.

(16) Replacement of Image Erase Lamp LA2

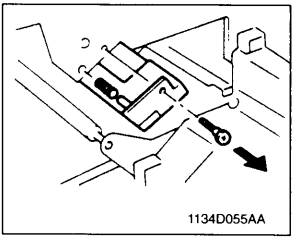

1. Swing down the Front Door.
2. Remove the IU.
3. Remove one adjusting screw to free Image Erase Lamp LA2.