2–7. FUSING UNIT

(1) Removal of the Fusing Unit

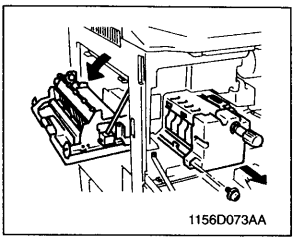

1. Open the Left Door.
2. Swing down the Front Door.
3. Remove one screw and the Fusing Unit.

(2) Disassembly of the Fusing Unit

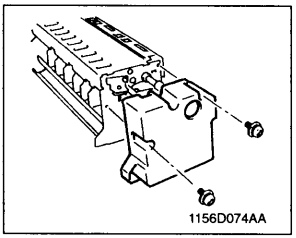

1. Remove two screws and the Front Cover.

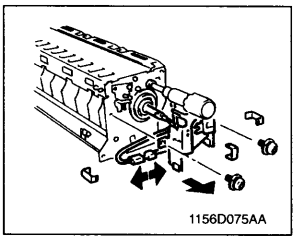

2. Unplug the connector of the Heater Lamp on the front.
3. Remove three harness holders.
4. Remove the Heater Lamp cord from the two edge covers.
5. Remove two screws and the front lamp holder.

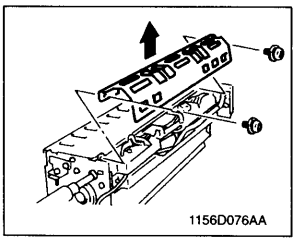

6. Remove two screws and the cover.

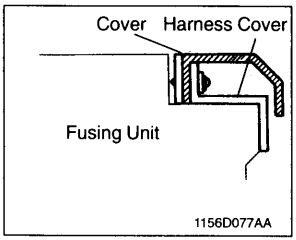

NOTE

At reinstallation, position the cover between the Fusing Unit and harness cover.