

21. Remove the two torsion springs.
22. Remove two shoulder screws and the Lower Exit Guide Assy.

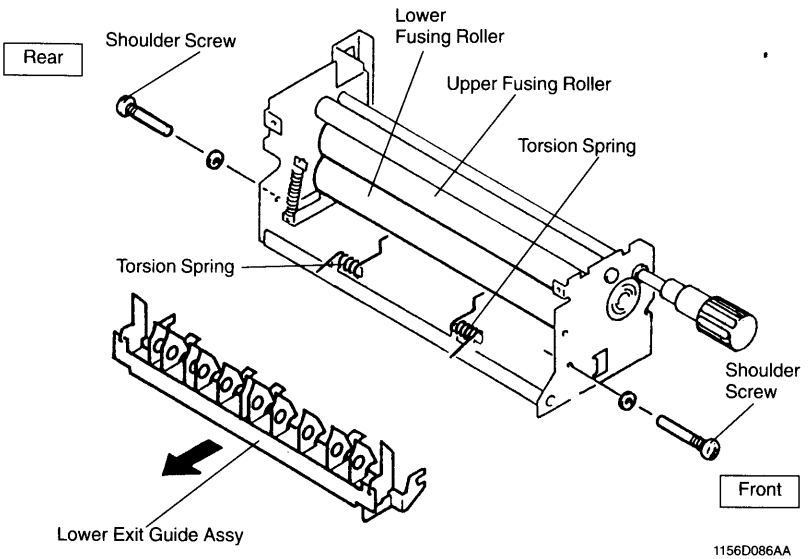

Lower Exit Guide Assy Position

① Installing the Lower Exit Guide Assy

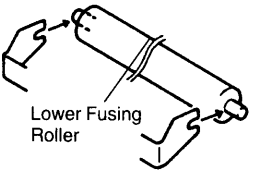

② Lower Fusing Paper Separator Finger Contact

