

23. Loosen the screw that secures the spring bracket at the front and then unhook the spring at the top. Repeat the same step for the spring in the rear.

NOTE

When reinstalling the springs, alternately tighten the bracket mounting screws until the brackets completely contact the ends of the Lower Exit Guide Assy.

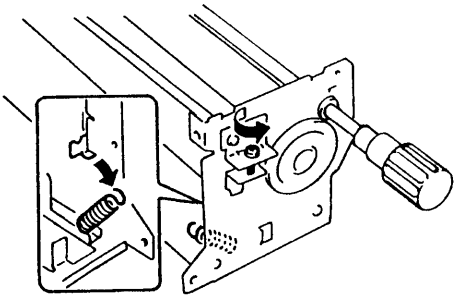


1156D087AA

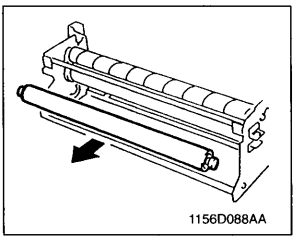


1156D088AA

24. Remove the Lower Fusing Roller.

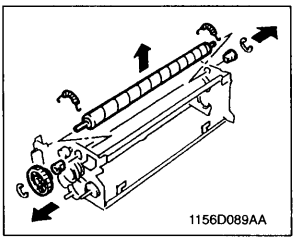

1156D089AA

25. Remove two extension springs.
26. Remove two E-rings, the gear, bushing, and Cleaning Roller.

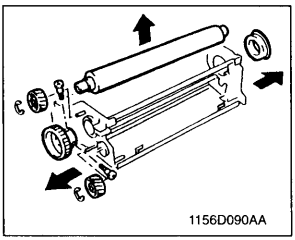

1156D090AA

27. Remove two E-rings, then two gears.
28. Remove two screws, the Upper Fusing Roller drive gear, and Upper Fusing Roller.