

(3) Replacement and Cleaning of the Upper Fusing Paper Separator Fingers

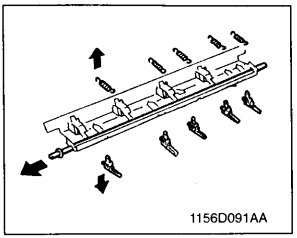


1. Remove the Upper Fusing Paper Separator Finger mounting bracket.
2. Remove five springs.
3. Slide out the shaft to remove the Upper Fusing Paper Separator Fingers.
4. Replace the fingers with new ones.

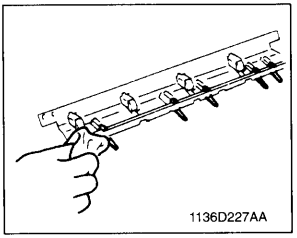


5. Using a soft cloth dampened with alcohol or silicone oil, wipe clean the Upper Fusing Paper Separator Fingers.

(4) Cleaning of the Lower Fusing Paper Separator Fingers

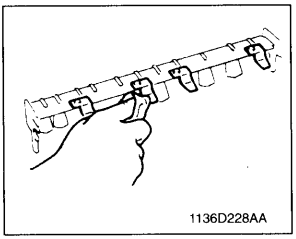


1. Remove the Lower Exit Guide Assy.
2. Using a soft cloth dampened with alcohol or silicone oil, wipe clean the Lower Fusing Paper Separator Fingers.

(5) Cleaning of the Fusing Unit Entrance Guide Plate

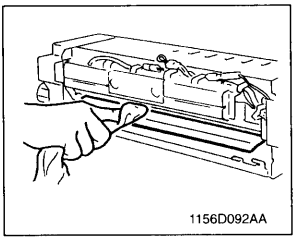

Using a soft cloth dampened with alcohol, wipe clean the Fusing Unit Entrance Guide Plate.

(6) Cleaning of Fusing Front and Rear Thermistors TH1/2

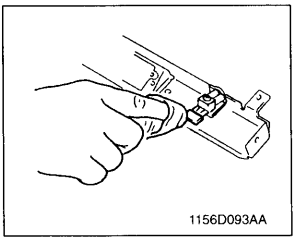

1. Remove the Temperature Detector Assy.
2. Using a soft cloth dampened with alcohol, wipe clean the two thermistors.