

(10) Replacement and Cleaning of the Lower Fusing Roller

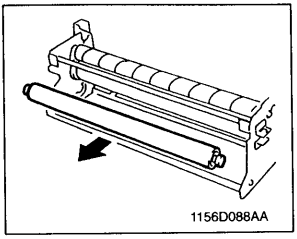

1. Remove the Lower Fusing Roller.
2. Replace the Lower Fusing Roller with a new one.

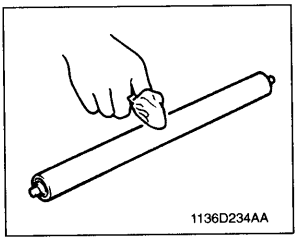

3. Using a soft cloth dampened with alcohol or silicone oil, wipe clean the Lower Fusing Roller.