


Adjustment of Front Door Interlock Switch S21

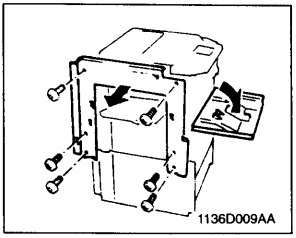

1. Swing down the Front Door.
2. Remove six screws and the Upper Left Cover.

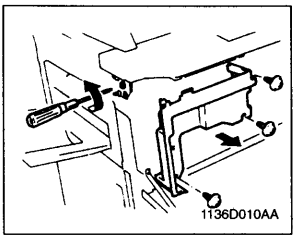

3. Remove three screws and the cover.
4. Loosen two screws that secure Front Door Interlock Switch.

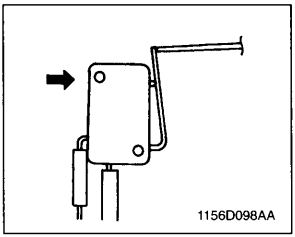

5. Close the Front Door.
6. Slowly move the switch to the front until the actuator is closed by the actuator stop on the Front Door. Then, tighten the two mounting screws.

   • The switch is wired for the NO type.