3-6. ELECTRICAL/IMAGE ADJUSTMENTS

(1) Initial Adjustment of Original Size Detecting Board

◆ **Important**

- The following adjustment must be made when memory has been cleared, RAM Board PWB-R or Original Size Detecting Board UN2 replaced, or an Original Size Detecting Sensor replaced or added.

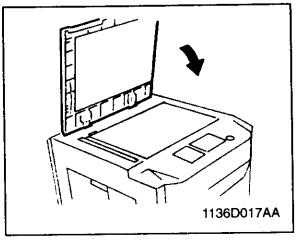

1. Lower the Original Cover with no original placed on the Original Glass.

2. Call the Tech. Rep. mode menu to the screen.
3. Touch [Function] to show the Function menu on the screen.
4. Touch [F7 Orig. Sensor] .
5. Press the Start Key to let the copier make the initial adjustment of the Original Size Detecting Board.

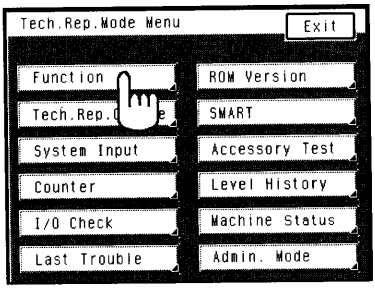

1156D142CA

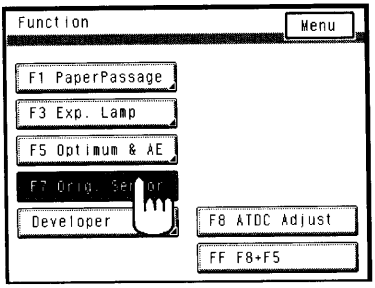

1156D135CA

NOTE

While the copier is in the adjustment cycle, the Start Key is lit up orange. The key turns green as soon as the adjustment cycle is completed.

6. After the adjustment has been made, press the Panel Reset Key to return the copier to the Basic screen.