
(4) Adjustment of Exposure Level in the Auto Exposure Mode


◆ **Important**

- Before starting the procedure, check that the Auto Exposure mode is selected on the Touch Panel.
- For the adjustment, stack about five blank sheets of A3 or 11" × 17" paper on the Original Glass and lower the Original Cover.
- After this adjustment, be sure to check the optimum exposure setting in the Manual Exposure mode.

1. Make sure that the Auto Exposure mode is selected on the Touch Panel. Then, stack about five blank sheets of A3, or 11" × 17", paper on the Original Glass and lower the Original Cover.

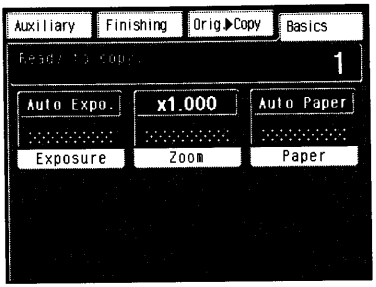


1156D140CA

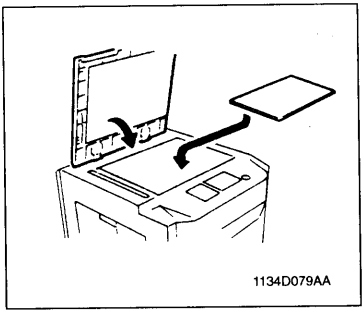


1134D079AA

2. Call the Tech. Rep. mode menu to the screen.
3. Touch [Function] to show the Function menu on the screen.
4. Touch [F5 Optimum & AE].
5. Press the Start Key to let the copier adjust the exposure level in the Auto Exposure mode. (It will run for about 30 seconds.)

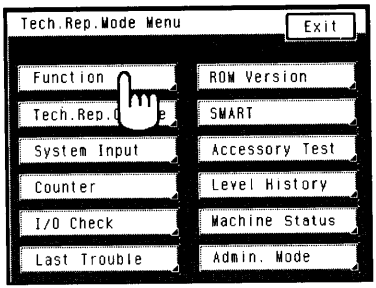

1156D142CA

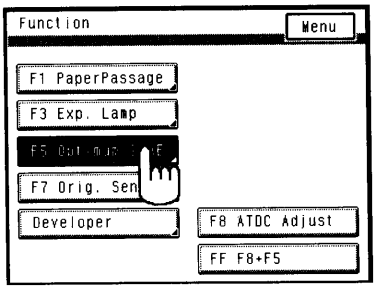

1156D144CA

While the copier is in the adjustment cycle, the Start Key is lit up orange. The key turns green as soon as the adjustment cycle is completed.

6. After the adjustment, touch [Menu] to return the copier to the Tech. Rep. menu.
7. Check the optimum exposure setting in the Manual Exposure mode. (See p. D-73.)