
(5) Adjustment of Optimum Exposure Setting in the Manual Exposure Mode

◆ **Requirement**


- Exposure Lamp voltage setting range in the Manual Exposure mode ... 44 to 56
- When the manual exposure setting is at the central indication, no image of step no. 1 of a Kodak Gray Scale should be produced on the copy, but a faint image of step no. 2 should be produced.

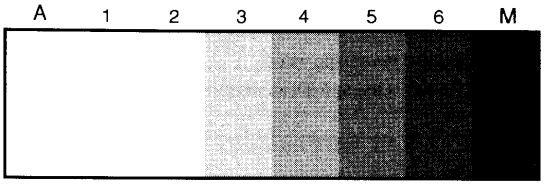

1136D300AA

◆ **Important**

- This adjustment should be made only after completing the "Adjustment of Exposure Level in the Auto Exposure Mode" and "Adjustment of the Aperture Blades".
- If the setting has been changed in this adjustment, be sure to make the "adjustment of exposure level in the Auto Exposure mode".

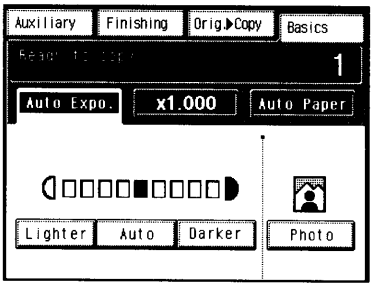


1156D137CB


1. Place the Kodak Gray Scale lengthwise, face down, and at the center on the Original Glass. Place a sheet of pure white A3 or 11" × 17" paper over it and then lower the Original Cover.
2. Set the copier into the Manual Exposure mode and set the exposure setting to the central or fifth indication (EXP5). Make about 3 copies using A3 or 11" × 17" paper (so that the PC Drum sensitivity stabilizes). Then, check that the third copy meets the requirement given above.

*If the image density is outside the specifications, make the following adjustment.

3. Call the Tech. Rep. mode menu to the screen.
4. Touch [Tech. Rep. Choice] to show the "Tech. Rep. Choice 1" menu on the screen.

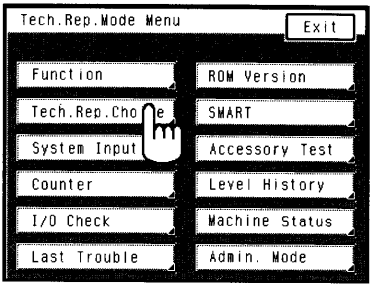

1156D141CA

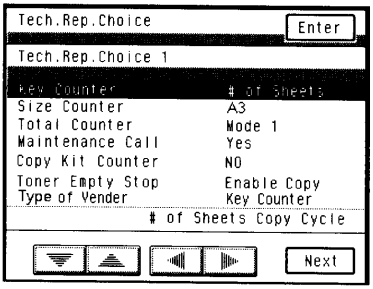

1156D145CA