(4) Adjustment of Manual Feed Paper Take-Up Solenoid SL4

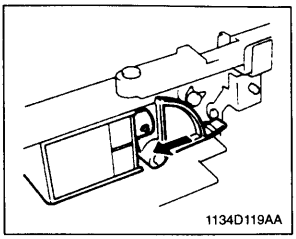

1. Remove the SL4 mounting bracket. (For the removal steps, see p. D-25.)
2. Manually bring SL4 into the energized position (plunger pushed in).
   * A click is heard when the solenoid is energized. Then, hold the plunger in position.

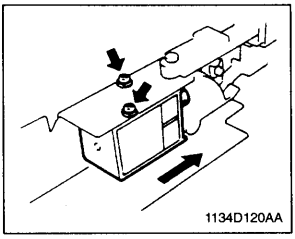

3. Loosen two screws that secure the SL4 and slide SL4 all the way in the direction of the arrow.

4. Slowly move the SL4 in the direction opposite that in step 3. When the two Stoppers just swing into the upright position, tighten the two SL4 mounting screws.

