(5) Adjustment of Exit/Duplex Solenoid SL5

◆ **Requirement**

- With the lever in contact with the stopper (SL5 in the deenergized position), the gap between the plunger rubber washer and the solenoid should be 4.0 to 4.5 mm.

◆ **Important**

- After the adjustment, move the plunger manually to check that it moves smoothly and the Switching Plate swings up and down properly.

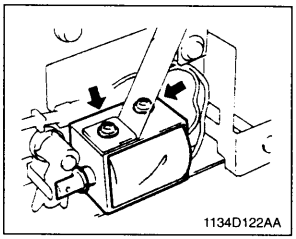

1. Open the Left Door.
2. Loosen two screws that secure SL5.

3. Bring the lever into contact with the stopper. Keeping that position, move SL5 so that the gap between the plunger rubber washer and solenoid measures 4.0 to 4.5 mm. When the specified dimension is reached, tighten the two SL5 mounting screws.

