
## 12-5. Original Size Detection Timing

Master CPU on PWB-A affirms and resets the readings of the original size at the following timings.

- Takes size readings: When the Original Cover is raised to an angle of 15° or more (PC111 is deactivated).
- Affirms size readings: When the Original Cover is lowered to an angle of 15° or less (PC111 is just activated); or, when the Start key is pressed with PC111 in the deactivated state.
- Resets size readings: When the Original Cover is raised (S108 is deactuated).

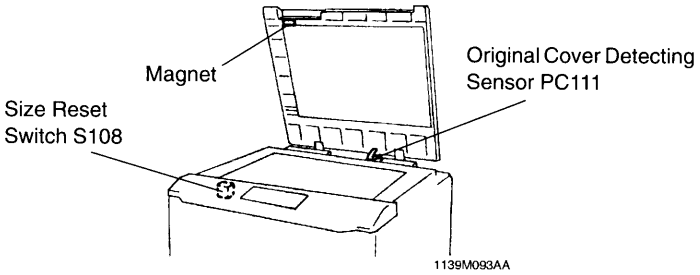


| | Control Signal | Blocked | Unblocked | WIRING DIAGRAM |
|---|---|---|---|---|
| PC111 | PWB-A PJ17A-11 | L | H | 21-G |

| | Control Signal | ON | OFF | WIRING DIAGRAM |
|---|---|---|---|---|
| S108 | PWB-A PJ12A-1 | L | H | 16-B |