

24 EXIT UNIT

Drive from the Fusing Unit is transmitted via a gear train to turn the 1st/2nd Paper Exit Rollers.

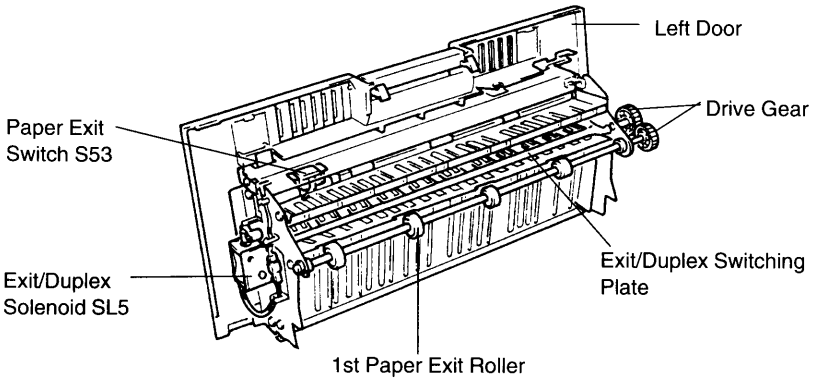

Main Control Board PWB-A outputs a signal to energize Exit/Duplex Switching Solenoid SL5, which switches the position of the Exit/Duplex Switching Plate. The Unit has Paper Exit Switch S53 built into it which detects a sheet of paper being fed out of the Unit. (For more details of switching control, see the Service Manual for "DUPLEXING UNIT").

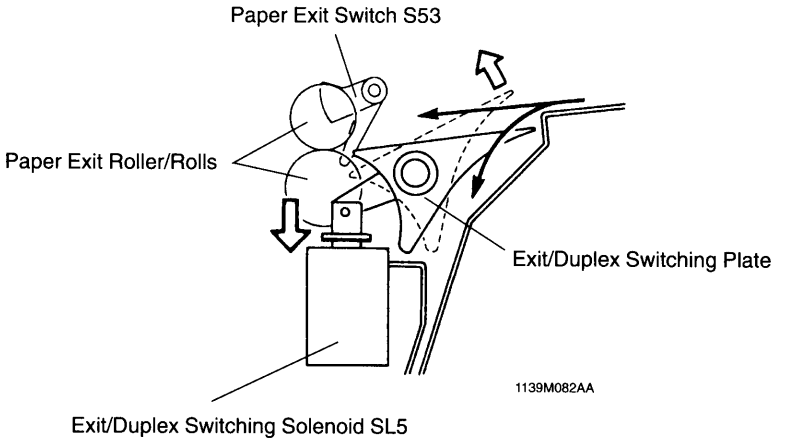

	Control Signal	ON	OFF	WIRING DIAGRAM
S53	PWB-A PJ14A-8	L	H	3-D

	Control Signal	Energized	Deenergized	WIRING DIAGRAM
SL5	PWB-A PJ14A-6	L	H	3-C