
24-1. Left Upper Door Interlock Switch S23

- Left Upper Door Interlock Switch S23 fitted to the copier body detects the Left Upper Door when closed. The Exit Unit is fitted to the Left Upper Door.
- When the Left Upper Door is closed, the rib on the Exit Unit pushes the Lever, which activates S23.

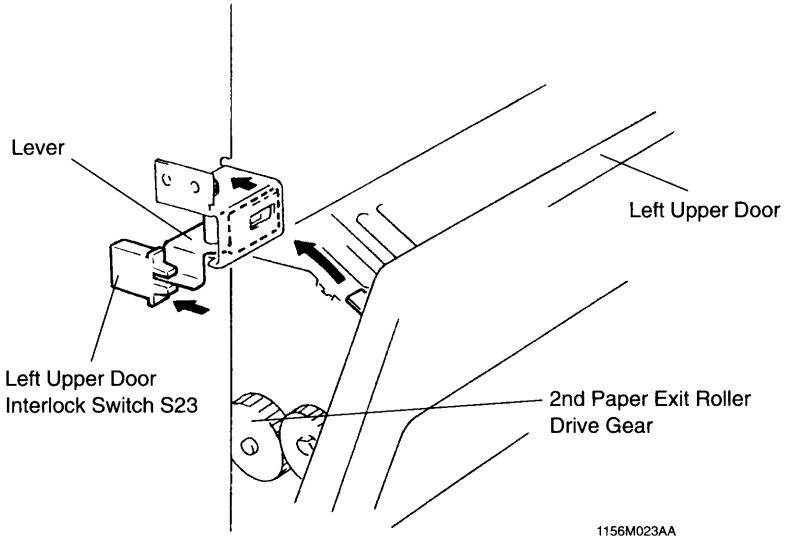

Controlled Part	Control Signal	ON	OFF	WIRING DIAGRAM
S23	PWB-A PJ16A-4	L	H	21-I