
2 CONTROL PANEL KEYS AND TOUCH PANEL

* For more details, see the "Operator's Manual" shipped with the copier.

1149SBS0201A

2-1. Control Panel Keys

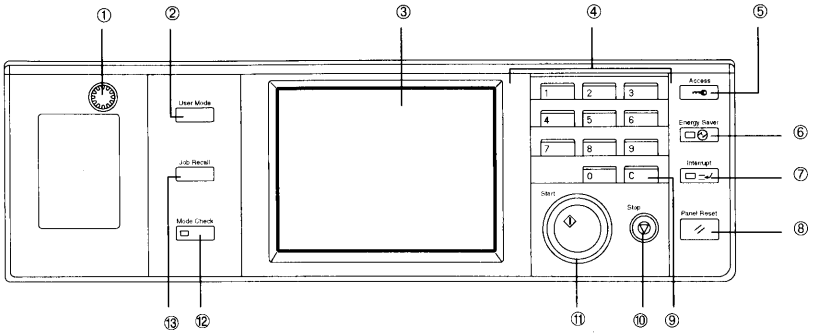

1149O002EA

① Display Contrast Knob
- Varies the brightness of the Touch Panel.

② User Mode Key
- Changes the screen to the User Mode setting screen.

③ Touch Panel
- Shows various screens and messages.

④ 10-Key Pad
- Numeric keypad used for entering the number of copies to be made, zoom ratio, access number, and the Tech. Rep. mode settings.

⑤ Access Mode Key
- When either "100 Accounts" or "1000 Accounts" has been selected for the "Copy Track" function, the entry of the access number and the press of this key (Access Mode) will allow the user to make copies.

⑥ Energy Saver Key
- Sets the copier into the Energy Saver mode.

⑦ Interrupt Key
- Sets the copier into, or lets it leave, the Interrupt mode.

⑧ Panel Reset Key
- Clears all control panel settings made previously, initializing the copier.

  Note: It does not, however, clear the contents of the zoom and job program memory and the settings made immediately before the Interrupt mode.

⑨ Clear Key
- Clears the number-of-copies setting, zoom ratio, and counter count.

⑩ Stop Key
- Stops a copy cycle.

⑪ Start Key
- Starts a copy cycle.

⑫ Mode Check Key
- Shows the Mode Check screen, on which the user can check the current copying settings.

⑬ Job Recall Key
- Selects the Job Recall screen which allows the user to recall or check a copy-job program previously stored in memory.