
2-2. Explanation of the Touch Panel

1. Basic Screen

- The Basic screen is an initial screen that appears when the copier is turned ON, panel is reset, or when auto clear is activated.

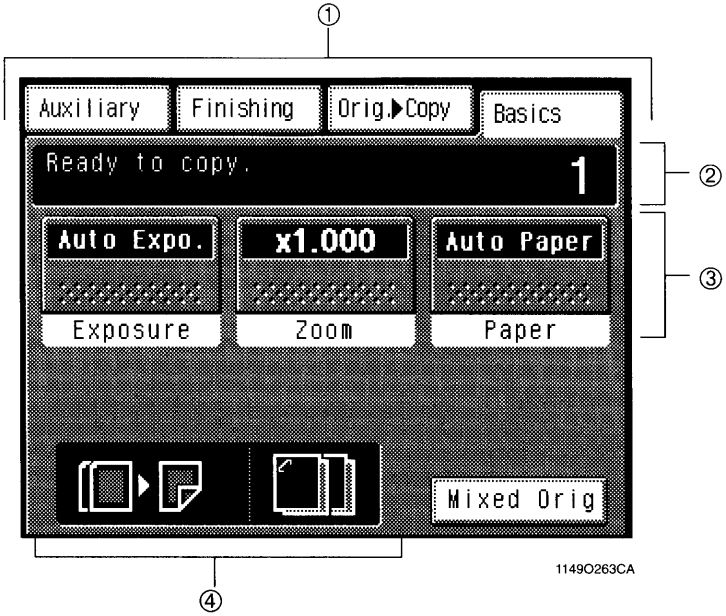

① Supplementary Function Keys
- Selects the corresponding menu screen, either Auxiliary, Finishing, or Orig. ▶ Copy.

② Message Display
- Shows the current copier status, operating instructions, and other data including the number of copies selected and the amount of paper still available for use.

③ Basic Function Keys
- Allows the user to select the exposure level, zoom ratio, and copy paper.

④ Function Display (This does not appear when the copier is initialized)
- Shows graphic representations of the settings currently made for Orig. ▶ Copy and Finishing.