
3 FUNCTIONS OF SWITCHES AND POINTS ON PWB-I

1156SBS0301A


3-1. PWB-I Location

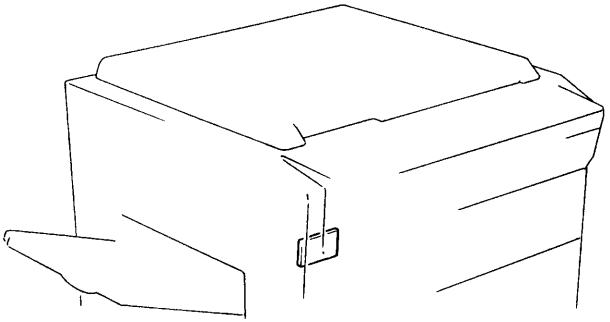

1156S001AA

1156SBS0302A

3-2. Tech. Rep. Settings Switches Board PWB-I

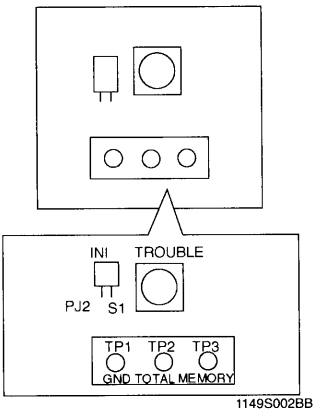

1149S002BB

Symbol	Name	Description
S1	Trouble Reset Switch	Resets a malfunction including those of the Exposure Lamp (C04XX) and fusing (C05xx).
PJ2	Initialize Switch	Forcibly resets a misfeed or malfunction that occurrs due to incorrect operation, etc. when it cannot be reset by opening and closing the Front Door or the press of S1.
TP1	GND Test Point	Ground terminal used for memory clear.
TP3	Memory Clear Test Point	Initializes all data except the counts of electronic counters, access numbers and administrator number for Copy Track, and RD mode functions.