
1149SBS0400A

4 USER'S CHOICE MODE

- The User's Choice mode available through the User Mode menu is used to make various settings according to the user's needs.

1149SBS0401A

4-1. User's Choice Selection Screen

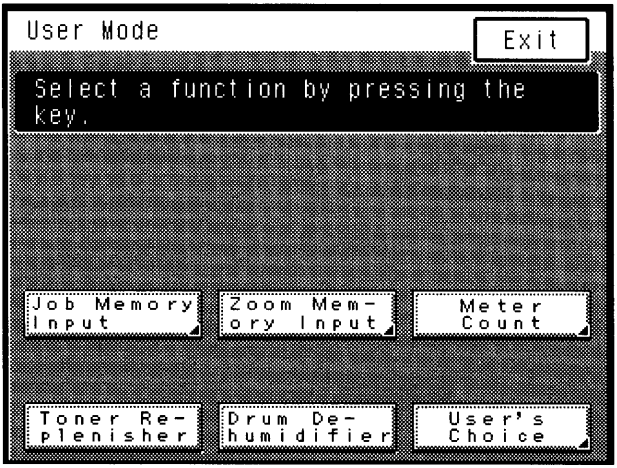

1149O262DA

1149SBS0402A

4-2. User's Choice Function Setting Procedure

<Setting Procedure>

1. Press the User Mode key on the control panel and then touch the "User's Choice" key.
2. Select the page number key that contains the desired function from among 1/6 through 6/6 shown at the bottom of the Touch Panel.
3. Select the function to be set and make settings as required.
4. After the settings are complete, touch the "Enter" key to validate the settings.

NOTE:
The function selected is highlighted.

<Exiting the Mode>

Perform any one of the following steps to go back to the Basic screen.

- Press the Panel Reset key on the control panel.
- Touch "Exit" on the Touch Panel.