
CONTENTS

1. FUNCTION MODE AND ADJUSTMENT MODE S-1
   1-1. Function Mode S-1
   1-2. Adjustment Mode S-4

2. OTHER INFORMATION S-6
   2-1. Copy Counters S-6
   2-2. Drum Life Display S-7

1 FUNCTION MODE AND ADJUSTMENT MODE


- To put this Copier into the function mode or adjustment mode, use an appropriate combination of the Keys on the Control Panel. The modes can be used for troubleshooting and adjustments.

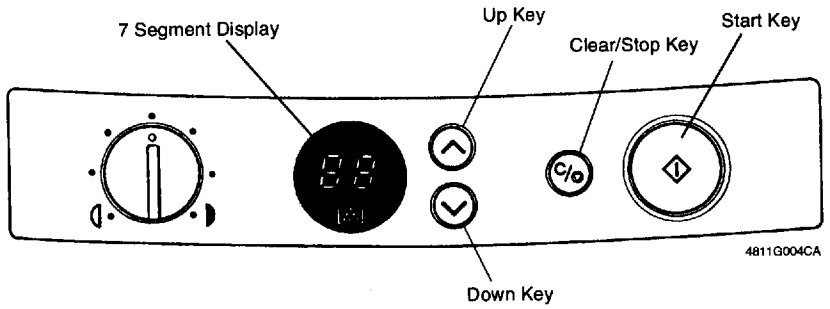

1-1. Function Mode

◆ Switching to the function mode

1. Turn the POWER Switch OFF.
2. Hold down the Up Key (⌃) and Down (⌄) Key on the Control Panel at the same time and turn the POWER Switch ON. In this state, wait (about 7 seconds) until " F " appears on the 7-Segment Display.
3. When the Display has shown " F ", depress the Up or Down key to switch from one function mode to another as shown below:



4. Depress the Start Key to start the operation of the corresponding function mode. Depress the Clear/Stop Key to stop the operation. After the function mode has stopped, depress the Clear/Stop Key again to erase the function number and keep only " F " displayed.
5. To return from the function mode to the normal mode, turn the POWER Switch OFF and back ON again, or swing open the Upper Half of the Copier.