2-6. Removal of the Left Cover

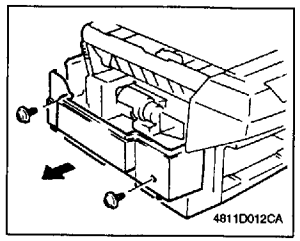

1. Remove the Original Cover and Top Cover.
2. Remove two screws and the Left Cover.

2-7. Removal of the Front Cover and Operation Panel

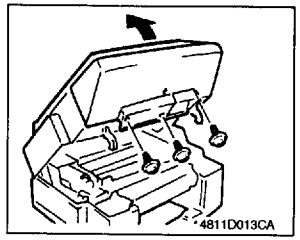

1. Swing up the Upper Half of the Unit and remove three screws that secure the Front Cover.

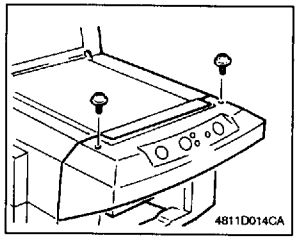

2. Close the Upper Half and remove two screws that secure the Front Cover.

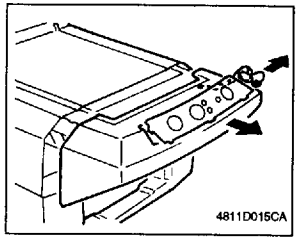

3. Slide the Front Cover slightly forward,remove Operation Panel by pressing panel from the rear at upper center position and unplug the two Connectors of the Operation Panel., and remove the Front Cover.

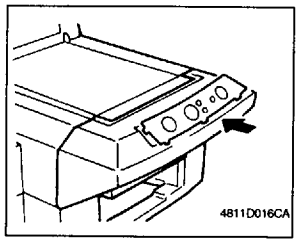

Reassembling Procedure

1. Guide thew harness for the operation Panel through the hole for the panel in the Front Cover and press the Operation Panel inside the hole in the Front Cover.
2. Slide the Front Cover to the machine. Pay attention for not squeezing the harness of the Operation Panel between cover and optic frame (hold down harness).

2-8. Removal of the Original Glass

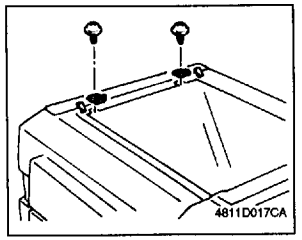

1. Remove the Original Cover.
2. Remove two screws that secure the Original Glass, and remove the Original Glass Holders.

   * When the Upper Cover has already been removed, the Original Glass can be removed by merely loosening the two screws.

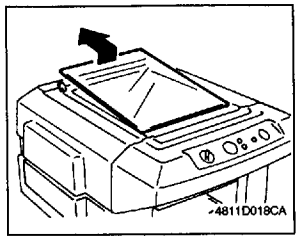

3. Slightly lift the Original Glass and slide it back to remove.

2-9. Removal of the Imaging Module

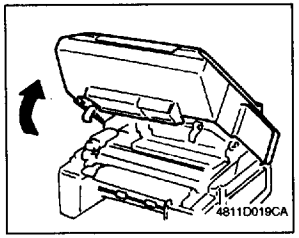

1. Swing up the Upper Half of the Unit.

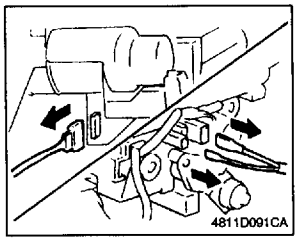

2. Hold up the Imaging Module and disconnect the two fastened terminals (HV; right side) and one connector (left side; under toner bottle holder).

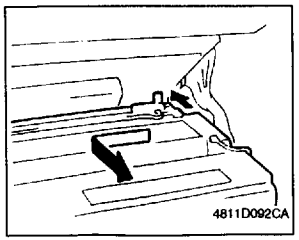

3. Slightly lift the Imaging Module, hold down the Securing Lever, slide the Imaging Module to the left and pull it out to the front.