2-10. Removal of the Exposure Lamp

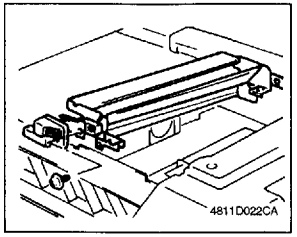

1. Remove the Original Cover, Upper Cover and Original Glass.
2. Slightly raise the left-hand side of the Scanner and remove the one screw that secures the Exposure Lamp Terminal Cover.
3. Remove the Exposure Lamp.

NOTE

Wear gloves to handle the Glass Tube of the Exposure Lamp.

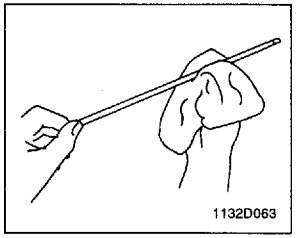

4. Wipe the Lamp with a soft cloth dampened with alcohol.

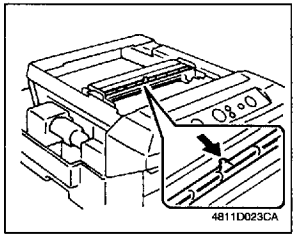

5. When reinstalling the Exposure Lamp, face the protrusion of the Lamp toward the Lamp Reflector Opening and make sure that the Lamp Terminal fits securely in the Terminal on the right of the Scanner.

   Check the light homogeneity and distribution on copy (refer to 3-1)

2-11. Removal of the Exposure Lamp Thermal Fuse

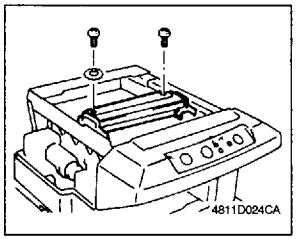

1. Remove the Original Cover, Top Cover and Original Glass.
2. Remove two screws and the Aperture Plates Assy.

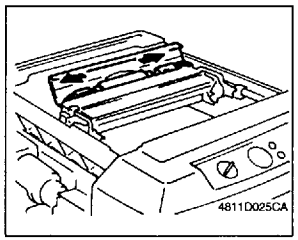

3. Unplug the two Connectors of the Exposure Lamp Thermal Fuse Holder.

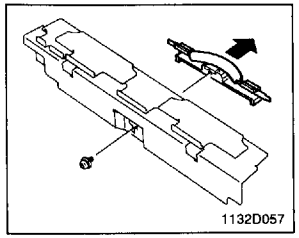

4. Remove one screw and the Exposure Lamp Thermal Fuse Holder.

   * When the Exposure Lamp Thermal Fuse Holder cannot be removed easily, unplug the Connector of the right-hand side Exposure Lamp Terminal.

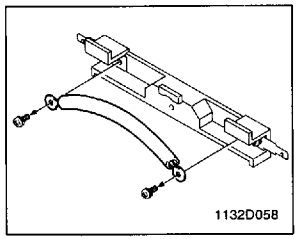

5. Remove two screws from the Exposure Lamp Thermal Fuse Holder and remove the Exposure Lamp Thermal Fuse.

ATTENTION

When reinstalling both Terminals of the Fuse make sure that Thermo Fuse is in contact with the Fuse Holder and the Lamp Reflector.

2-12. Removal of the Ozone Filter

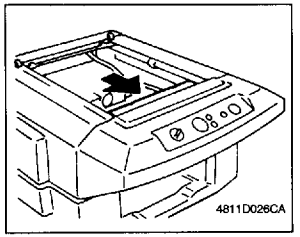

1. Switch on the copier and pull out the cassette.
2. Depress the Start Key. When the Scanner comes near the bottom of the Original Scale, turn off the Power Switch.

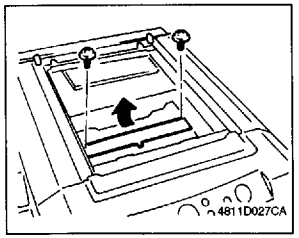

3. Remove the Original Cover, Top Cover and Original Glass.
4. Remove two screws and the Ozone Filter Cover.

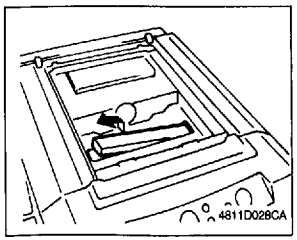

5. Lift the left-hand side of the Ozone Filter and slide the Ozone Filter to the left to remove.