

18. Pull out the Upper Fusing Roller.

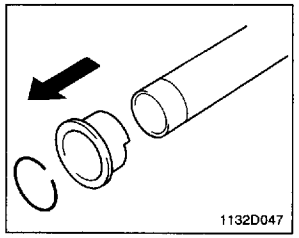

19. Snap off the C-ring and remove the bearing.

2-18. Removal of the Lower Fusing Roller

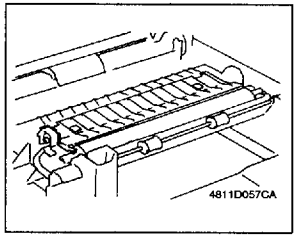

1. Repeat steps 1 to 4 in Section 2-17.
2. Remove the Right Cover.

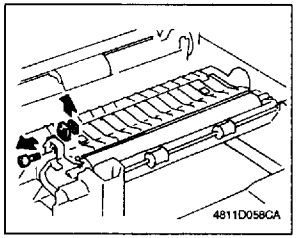

3. Remove one screw (axle) shown and shift the Guide Plate stopper upwards (also at the opposite side).

NOTE

At this time, use care not to lose the plate nut.

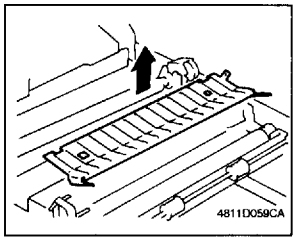

4. Remove the Pre-Fusing Guide Plate.

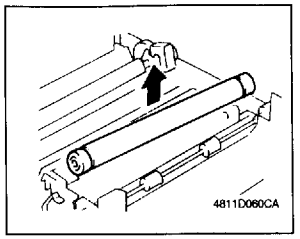

5. Remove the Lower Fusing Roller together with the Bearings.

2-19. Removal of the Switching Power Supply PWB-C

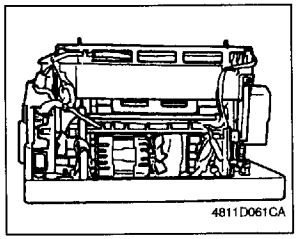

1. Remove the Original Cover, Top Cover, Rear Cover and Left Cover.

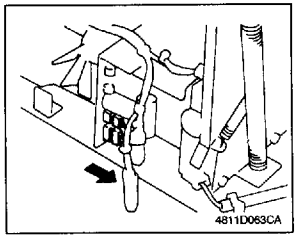

2. Disconnect the two Connectors from the Switching Power Bord.

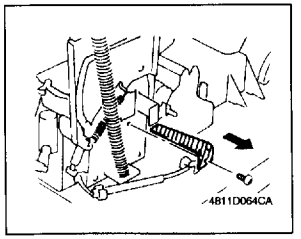

3. Remove one screw shown and the sheet metal that holds the Switching Power Board.

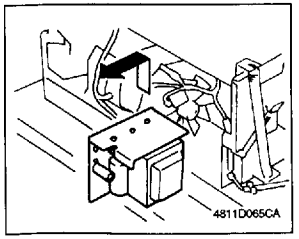

5. Slightly lift up the motor cover with one hand and with the other lift the Switching Power Board and pull it out to the front to remove.