2-20. Removal of the Main Drive Motor

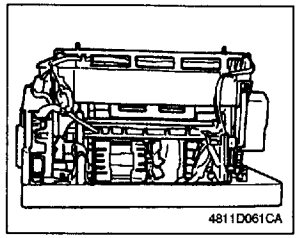

1. Remove the Original Cover, Top Cover, Rear Cover and Right Cover.

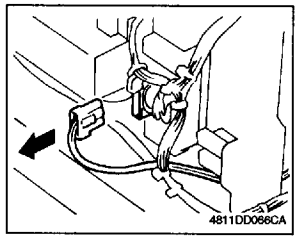

2. Unplug the Connector of the Main Motor on the Power Board.

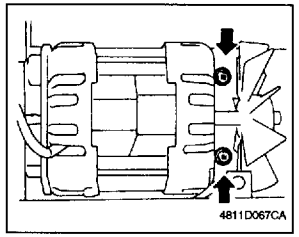

3. Remove two screws which secure the Main Motor.

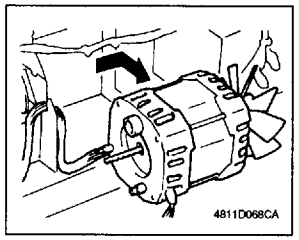

4. Slightly lift up the motor cover, slide the Main Motor to the right and pull it out to the front to remove.

2-21. Removal of the Erase Lamp

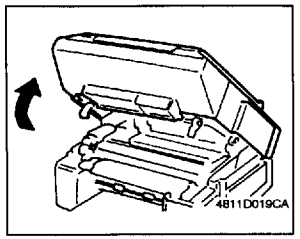

1. Swing up the Upper Half of the Unit.

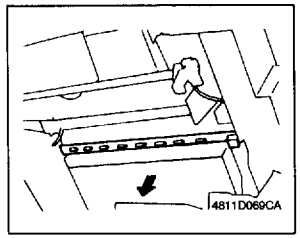

2. Pull and simultaneously bent the PWB carefully until tip of the positioning pin.

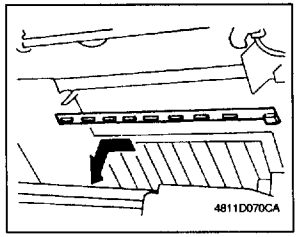

3. Now slide the Erase Lamp to the left and remove the Connector on the Logic Board.
4. Slide the Erase Lamp to the right to remove.

NOTE

At this time, use care not to break the Erase Lamp.

2-22. Exchange of PWB-D

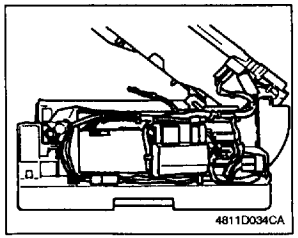

1. Remove the Power Cord.
2. Remove the Original Cover, Top Cover and Rear Cover.