4 REFRESH OF MACHINE AFTER 25000 COPIES

4-1. Cleaning of Paper Feeding Section

Remove the Power Cord, Pressure Bracket at paper feeding following 2-15-3.
Clean corcs and mylar with soft piece of cloth soaked with Isopropyl alcohol.
Shift rubber of the paper feeding segments on the plastic holding to a new position (about 10 mm).
Reassemble Pressure Bracket.

4-2. Remove covers

Remove Original-, Top-, Left-, Right- and Rear Cover and the Imaging Module following 2-1 to 2-9.

NOTE

Don't forget to remove the Suspension Bracket from the old Imaging Module and assemble to the new Imaging Module. (See Parts Manual FIG. 7 Page 14)

4-3. Cleaning of machine

Clean the whole machine including all covers and Original Glass Plate from Paper Dust and Toner Dust.

4-4. Replacement of Ozone Filter

See chapter 2-12 (D-8).

4-5. Cleaning of Timing Roller

Clean the Timing Roller and the Mylars with a piece of soft cloth soaked with Isopropyl Alcohol.

4-6. Cleaning of Optics Section

Clean all mirrors (6), erase lamp, lamp reflector and the Platen Glass with a piece of soft cloth soaked with glass cleaner.

4-7. Replacement of Imaging Module

Remove Suspension Bracket from the old Imaging Module and assemble to the new one. Insert new Imaging Module following 2-9.

NOTE

Do not forget to remove the sealing tape from the Starter Bottle.

4-8. Exchange of EEPROM IC3 on PWB-A

- Plug Power Cord in and switch machine ON.
- Display shows "du" or "SU".
- Open the machine.
- Display shows "U5".
- Remove old EEPROM IC3 on PWB-A carefully.
- Insert new EEPROM IC3 from Refresher Kit.

NOTE

Take care to position EEPROM nose upwards.

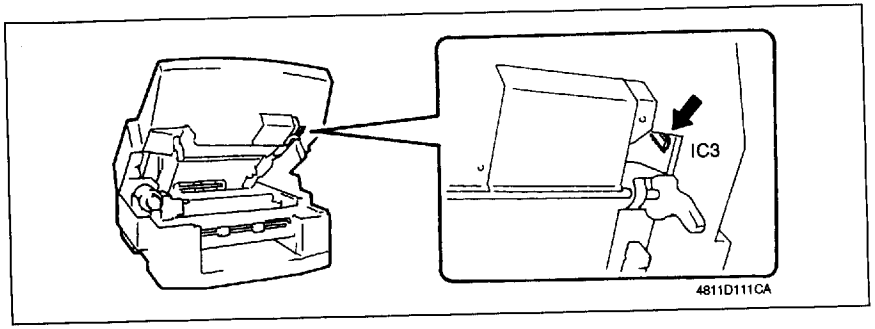

- Press Start while copier is open and switched on.
- Display shows two horizontal bars for about 2 sec.; then "U5" reappears.
- Close copier.
- Warming up, display shows flashing "1".
- "UF" appears when warming up has finished.
- Press Start to initiate starter filling.
- Scrolling bar appears in display.

NOTE

Do not interrupt starter filling!!

- Wait for about 5 minutes until "1" appears in display.
- Open machine and remove empty starter bottle.
- Shake toner bottle well, remove sealing tape and insert toner bottle.
- Close machine, unplug power cord and reassemble all covers.
- After plugging power cord in and switching power ON machine will be ready to copy.