• Forced ready mode (06) :


Power ---► 0 6 ► Forced ready status

Note: This mode should be used only when checking paper feeding operation.

• Setting mode (08) :

For this mode, refer to "Setting Mode" on page 1-12.

Self-diagnostic mode progress diagram :

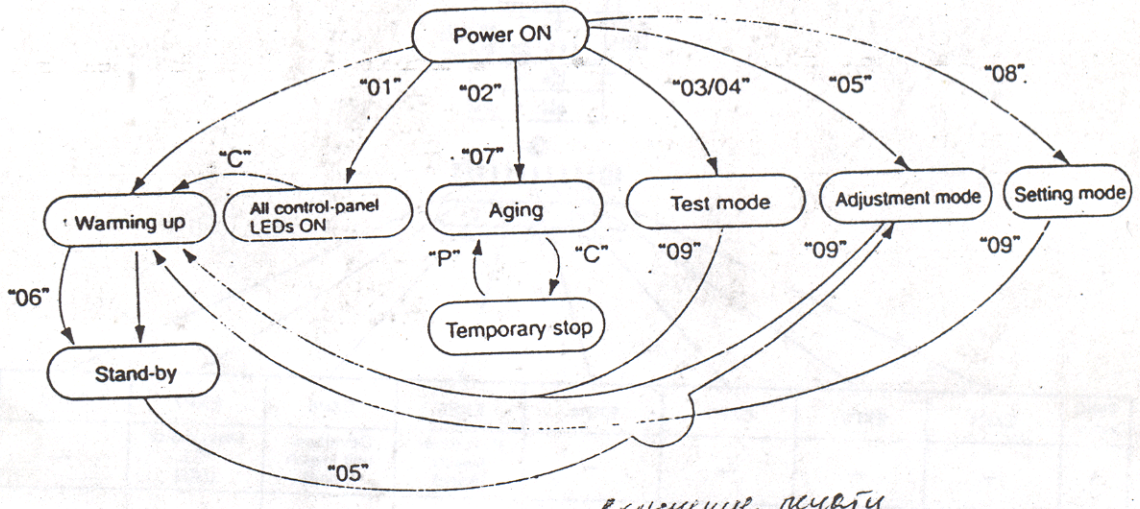

"P" : Press PRINT. включение печати

"C" : Press CLEAR/STOP. включение останова