Canon

Service Bulletin

COPIER

Issued by Canon Europa N.V.

Model : Saddle Finisher-C2

No.: Acc-145
(FF-T01-W-000041-01)

DATE: 09.04.99

Location : SERVICE MANUAL (FY8-13F6-000)

Subject : ADDITIONAL DESCRIPTIONS

Reason : This bulletin provides a new way of removing the saddle unit.

Details : New Way of Removing the Saddle Unit

2. "Removing the Saddle Unit" under B. "Saddle Stitcher Assembly" on p. 4-22
The new way of removal is effective if a newly designed lattice guide (FG5-8170-040/FB3-7338-040) is installed; if an old type of lattice guide is installed, follow the instructions on p. 4-22 of the current Service Manual (FY8-13F6-000).

1) Remove the four screws [1], and detach the PCB cover [2].

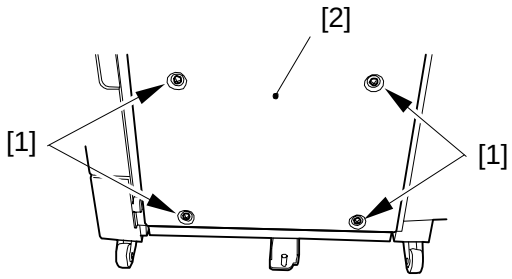


Figure 1

2) Remove the screw, and detach the bending roller knob [3].

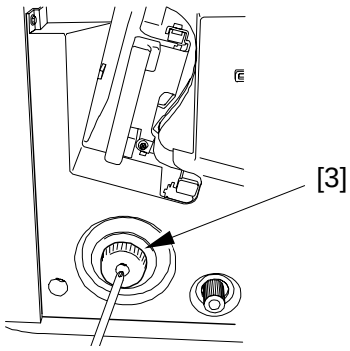


Figure 2

3) Remove the four screws [5], and detach the rear lower cover [4].

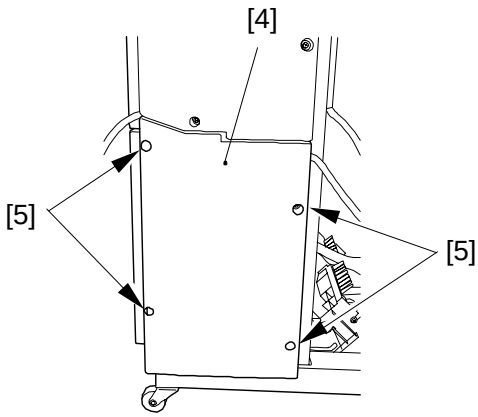


Figure 3

4) Disconnect the two connectors [6] used to connect to the finisher assembly.

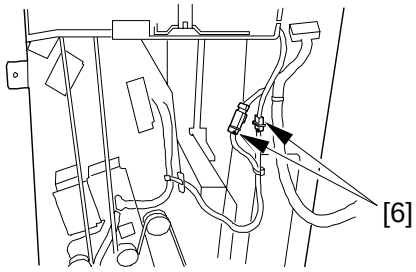


Figure 4

5) Remove the five screws [8], and detach the front inside cover [7].

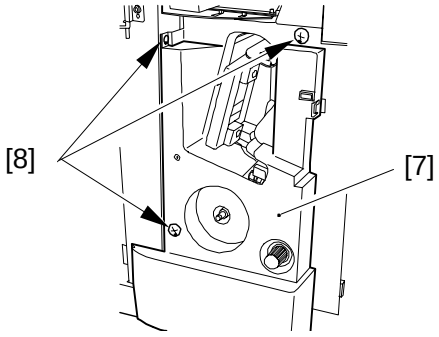


Figure 5

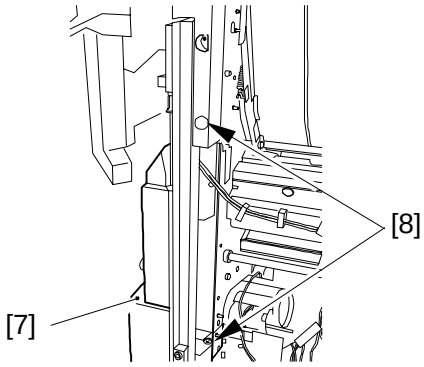


Figure 6

6) Remove the L-shaped pin [10], and disconnect the two connectors [11]; then, detach the delivery cover [9].

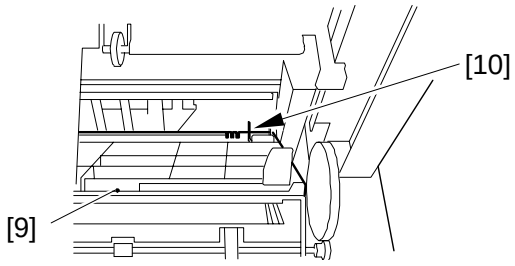


Figure 7

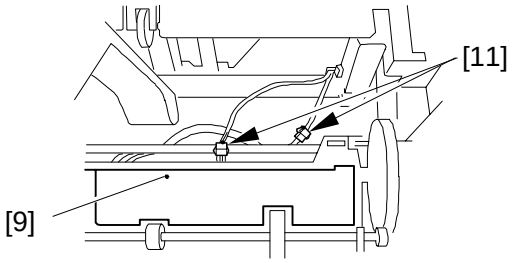


Figure 8

7) Remove the two screws each [14]; then, detach the front side cover [12] and the rear side cover [13].

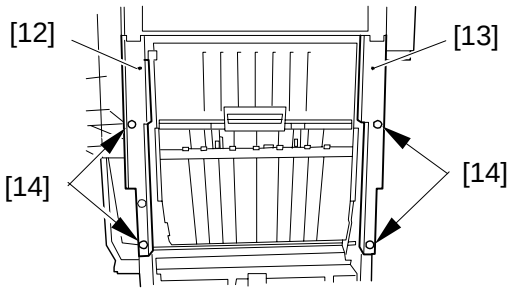


Figure 9

8) Remove the foot cover [15] of the frame. This is to avoid interference between the foot cover and the clock disk [16] of the paper retaining plate motor while the saddle unit is being removed.

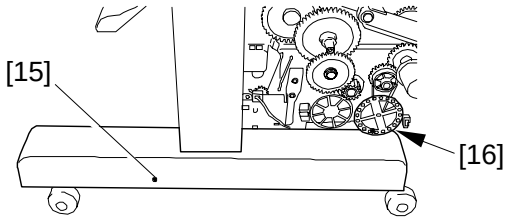


Figure 10

9) Remove the five screws [17] used to secure the saddle unit in place to the frame.
10) Remove the saddle unit [18] by shifting it in the direction of the copier.

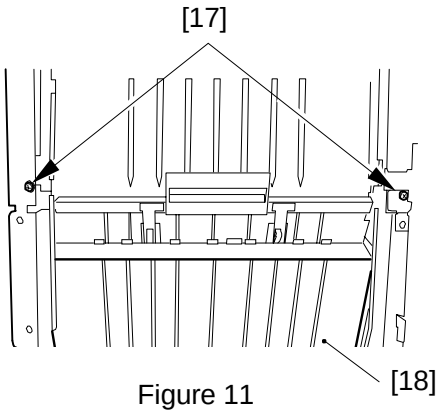


Figure 11

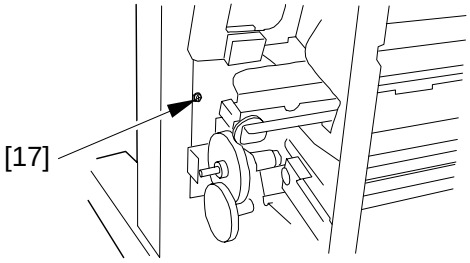


Figure 12

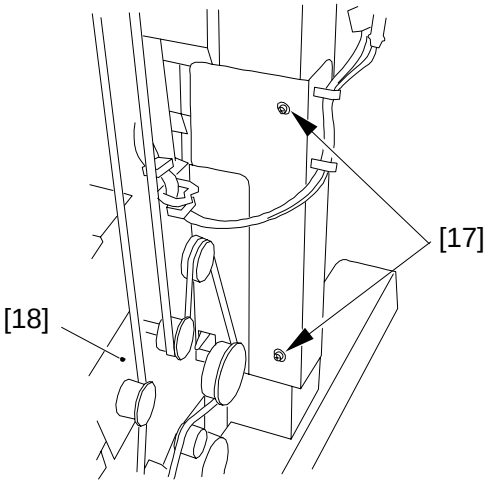


Figure 13