### (2) Registration FD

**Adjustment Procedure**

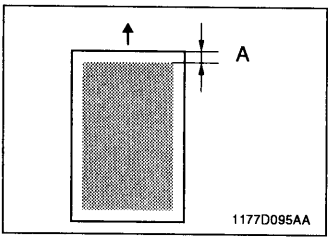


- Setting value range: 74 to 126
- Movement equivalent to 1 step of setting value: 0.23 mm

1. Produce a test pattern by running the F12-0 operation.
2. Check that width A on the test pattern falls within the specified range.
3. If it falls outside the range, use Adjust Mode A1 [Registration (FD)] and change the adjustment value so that width A falls within the specified range.

| REGISTRATION(FD)<br><br>10 KEY INPUT : |
|---|

Enter the adjustment value from the Key-pad and press the Start key to validate the value entered. (If a wrong value is entered, press the Clear key to clear it.)

If width A is longer than the specifications, decrease the adjustment value.

If width A is shorter than the specifications, increase the adjustment value.