
(6) IR/Registration FD

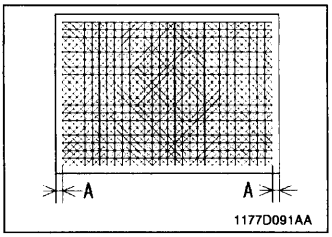

- Produce a test pattern by running the F12-1 operation.

- Setting value range: 84 to 116
- Movement equivalent to 1 step of setting value: 0.1227mm

Adjustment Procedure

1. Place the test pattern produced on the Original Glass and make a copy in the full size mode.
2. Align the copy with the original and check for any deviation in dimension A.
3. If it falls outside the range, use Adjust Mode A3 [IR/Registration (FD)] and change the adjustment value so that the deviation falls within the specified range.

IR/REGISTRATION(FD) 10 KEY INPUT :

Enter the adjustment value from the Keypad and press the Start key to validate the value entered. (If a wrong value is entered, press the Clear key to clear it.)

If the dimension A on the copy is on the upper side of that on the original, decrease the adjustment value.

If the dimension A on the copy is on the lower side of that on the original, increase the adjustment value.