




12. Unplug the Bias Cord from connector CN on the High Voltage Unit.
13. Unplug connector CN (7P) on the High Voltage Unit.

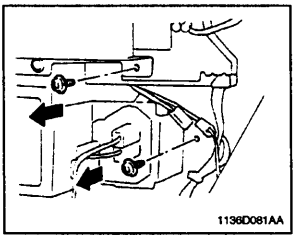


14. Remove the High Voltage Unit mounting screw.
15. Unplug the Paper Take-Up Connector mounting screw.

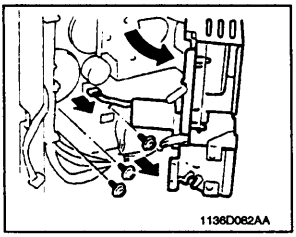

16. Open the High Voltage Unit and Paper Take-Up Connector Unit in the direction of the arrow.
17. Unplug the connector CN (8P) on the Upper Paper Take-Up Unit.
18. Remove three screws that secure the Upper Paper Take-Up Unit at the rear of the copier.

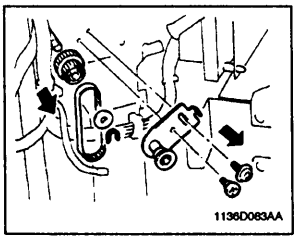

19. Remove two screws and the Tension Lever.
20. Remove the C-clip and the Synchronizing Belt.

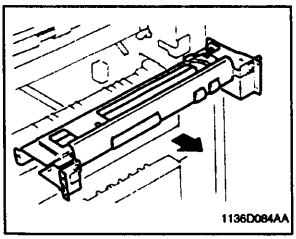

21. Remove the Upper Paper Take-Up Unit.