(3) Removal of the Paper Take-Up Rolls

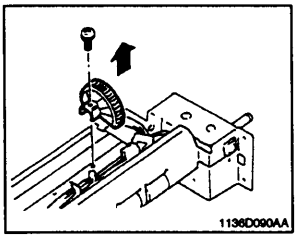

Remove one screw and the Paper Take-Up Roll.

(4) Cleaning of the Paper Take-Up Rolls

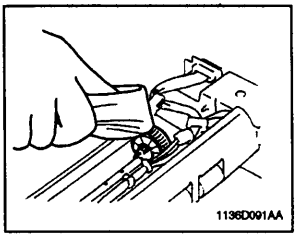

Using a soft cloth dampened with alcohol, wipe clean the Paper Take-Up Rolls.

(5) Cleaning of the Synchronizing Roller

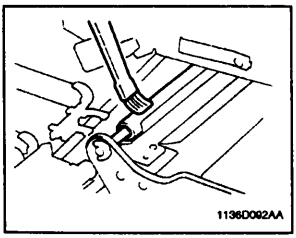

Using a brush or a vacuum cleaner, clean the Upper and Lower Synchronizing Rollers.

(6) Replacement/Cleaning of Paper Dust Remover

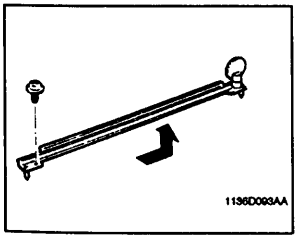

1. Remove the PC Unit by referring to p. D-26.
2. Using a coin, loosen the screw that secures the Paper Dust Remover at the rear of the copier.
3. Also using the coin, remove the screw that secures the Paper Dust Remover at the front of the copier.
4. Remove the Paper Dust Remover by sliding and lifting it in the direction of the arrow.
5. Replace the Paper Dust Remover with a new one.

