




4. Remove three belts.

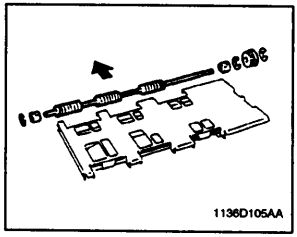



5. Snap off one E-ring and remove the Suction Rolls.


## (9) Disassembly of the Multi Bypass Unit

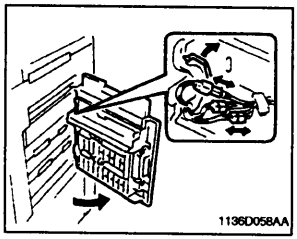


1. Open the Right Door.
2. Remove the harness from one wiring saddle.
3. Unplug three connectors CNs (2P, 3P, 3P)

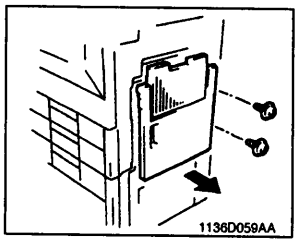


4. Remove two screws and the Right Door.

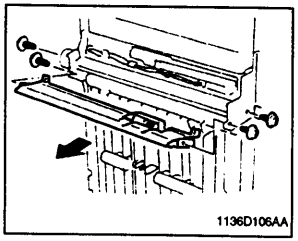


5. Remove four screws and the Separator Guide Plate Assy.