

11. Remove two hex cap screws and the electromagnetic spring clutch.

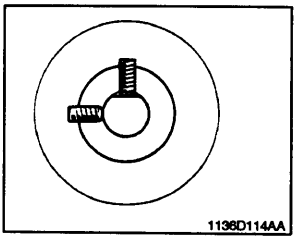

NOTE

When reinstalling the electromagnetic spring clutch, tighten the two hex cap screws while orienting the shaft of the Paper Take-Up Roll as shown in the figure on the left.
The end of the clutch must be flush with or slightly (up to 1 mm) recessed compared with the end of the shaft of the Paper Take-Up roll. Press the shaft of the Paper Take-Up roll in the direction of the arrow and check that gap A is 1 mm or more.

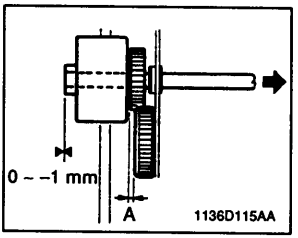

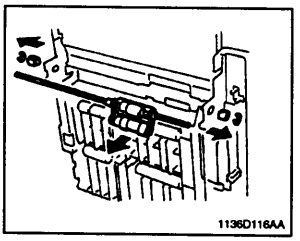

12. Snap off two C-clips to remove the Paper Take-Up Roll Assy.