


3. Using a soft cloth dampened with alcohol, clean the Lamp by gently wiping its surface in one direction.


NOTE

When reinstalling the Lamp, point the protruding navel of the Lamp toward the opening in the Lamp Reflector so that the protruding navel will not hit against the Lamp Reflector.
After reinstalling the Lamp, go to p. D-58 and perform "(4) Adjustment of Exposure Level in the Auto Mode."


(6) Removal of the Thermal Fuse

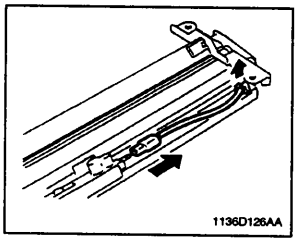

1. Unplug the Thermal Fuse connector CN.
2. Disconnect the Thermal Fuse wire from the clamp.

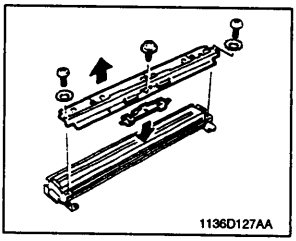


3. Remove two screws and the Aperture Blade Assy.
4. Remove one screw and the Thermal Fuse.

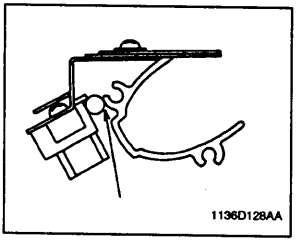

NOTE

The Thermal Fuse must be in contact with the Lamp Reflector.

(7) Cleaning of the 1st/2nd/3rd Mirrors

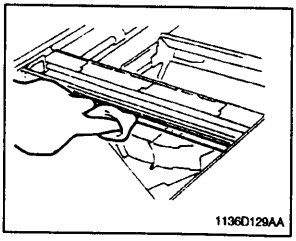

Wipe clean the Mirrors with a soft cloth.