




5. Remove three screws and the Hopper Unit.

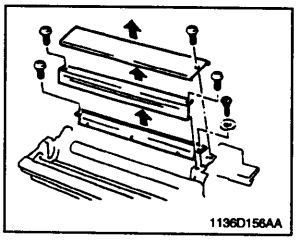


6. Remove one screw and the Hopper Lid.
7. Remove two screws and the Toner Scattering Prevention Plate.
8. Remove two screws and the Doctor Blade.

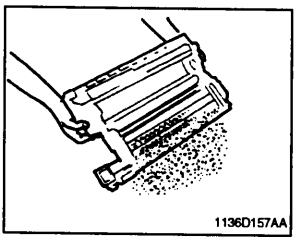

9. Dump the developer out of the Developing Unit.

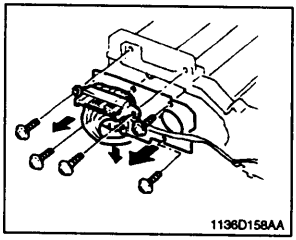

10. Remove two screws to unplug the 18P connector.
11. Remove three screws and the Mounting Plate Unit.
12. Remove the harness from the Edge Cover.

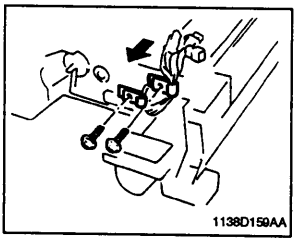

13. Remove two screws and the Cord Holder.