



10. Remove two screws and the Upper Fusing Guide Plate.

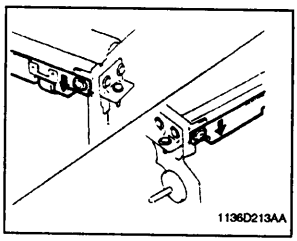


NOTE


When reinstalling the Upper Fusing Guide Plate, be sure that both ends of the Plate make full contact with the Frame.

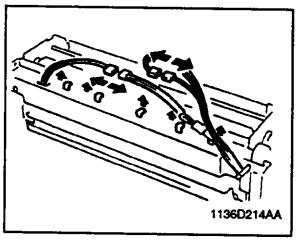

11. Remove the harness from the Harness Guide.
12. Unplug the harness connectors CNs (4P, 4P).

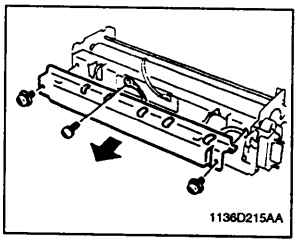

13. Remove two screws and the Harness Guide Plate.
14. Remove one screw and the Thermal Switch Wire.

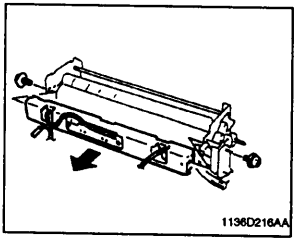

15. Remove two screws and the Temperature Detector Assy.