3-5. Electrical/Image Adjustments

(1) Adjustment of the Original Size Detecting Board

◆Important

- This adjustment must be made after memory has been cleared or the RAM Board or Original Size Detecting Board has been replaced; or the Original Size Detecting Sensor is replaced or a sensor is added.

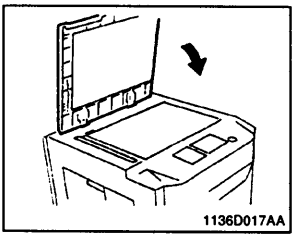

1. Close the Original Cover with no paper on the Original Glass.

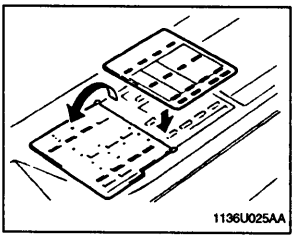

2. Open the System Panel.
3. Place Service Card 1 on the Supplementary Panel.

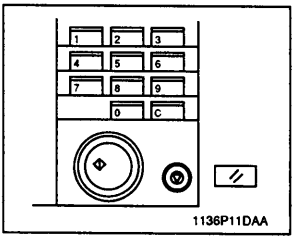

4. On the Control Panel, press the Stop Key, Multi-Copy Key 0, Stop Key and Multi-Copy Key 1, in that order. The copier enters the Tech. Rep. Program mode.

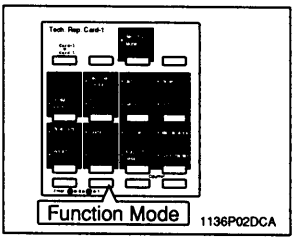

5. Press Multi-Copy Key 1, Function Mode Key (on the Service Card) and Multi-Copy Key 7 to set the copier into Test mode F7.
6. Press the Start Key and the Copier starts the adjustment.

> ***NOTE***
>
> *During the adjustment, the Start Key lights orange and returns to green upon completion of the adjustment.*

7. When the Start Key lights green, press the Panel Reset key to return to the initial mode.