(4) Adjustment of Exposure Level in the Auto Mode

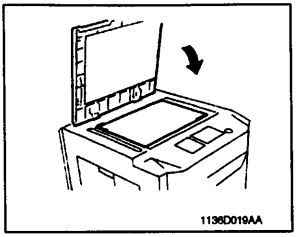

1. Select the Auto Exposure Mode.
   Place five sheets of A3 or 11" x 17" white paper (no image) on the Original Glass and close the Original Cover.

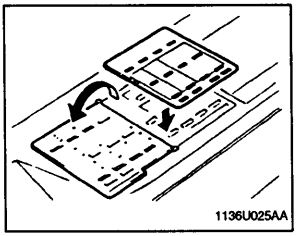

2. Open the System Panel.
3. Place Service Card 1 on the Supplementary Panel.

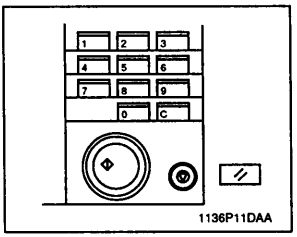

4. On the Control Panel, press the Stop Key, Multi-Copy Key 0, Stop Key and Multi-Copy Key 1 in that order. The copier enters the Tech. Rep. Program mode.

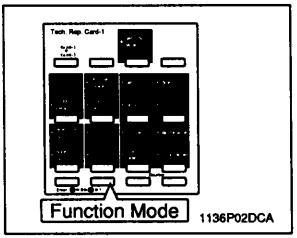

5. Press Multi-Copy Key 1, Function Mode Key (on the Service Card) and Multi-Copy Key 5 to set the copier into Test mode F5.
6. Press the Start Key and the Copier starts the Auto Exposure adjustment.

> ***NOTE***
>
> *During the adjustment (for approx. 30 seconds), the Start Key lights orange and returns to green upon completion of the adjustment.*

7. When the Start Key lights green, press the Panel Reset key to return to the initial mode.
8. Go to p. D-59.