
(13) Adjustment of the Image Trailing Edge Erase Width


◆Requirement

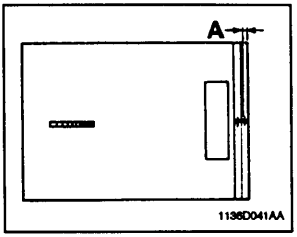


- A copy of reference dimension A (width 5.5 mm), shown in the left figure, of the GTC-001 chart, should have an erase width of 0.5-5.5 mm.
- Setting range: 42-58
- Unit of erase width: 1.0 mm

◆Important


- This adjustment should be made after the Image Leading Edge Erase Width adjustment.
- Before starting the adjustment, make sure that SCH-21 is set at "Edge Erase On". Refer to the Tech. Rep. Program mode in the SWITCHES ON PWBs manual.

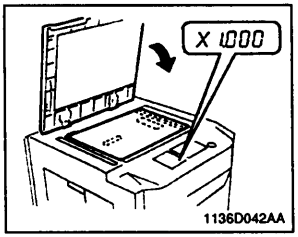

1. Place the GTC-001 chart face down on the Original Glass and align its rear left corner with the reference position marker on the Original Width Scale on the left side of the platen. Close the Original Cover.
2. In the full size mode (x1.000), make two single copies on A3 or 11" x 17" paper. Check the erase width in dimension A on the second copy. If the erase width is outside 0.5-5.5 mm, go to step 3.

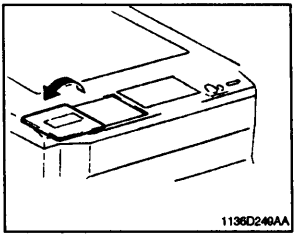

3. Open the System Panel.

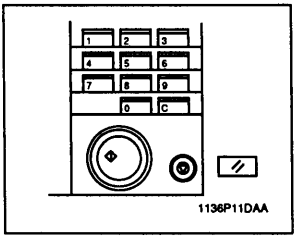

4. On the Control Panel, press the Stop Key, Multi-Copy Key 0, Stop Key and Multi-Copy Key 1, in that order. The copier enters the Tech. Rep. Program mode.
5. Press Multi-Copy key 1, Stop key and then Start key to enter the adjustment mode.