

10-2-3. Sensor Locations

- Three original size detecting sensors are located at the following places to detect originals of various sizes.
- Two additional sensors can be optionally installed to cover more original sizes that can be detected.


(Metric Area) Standard: CD1 (PC115), FD1 (PC116), FD2 (PC117)
Optional: CD2 (PC119), FD3 (PC118)
(Inch Area) Standard: CD1 (PC115), FD2 (PC117)
Optional: FD1 (PC116), FD3 (PC118)

NOTE: If the optional sensors are installed, set Jumper Connector JP2 on UN2 as illustrated below and run the F7 operation.

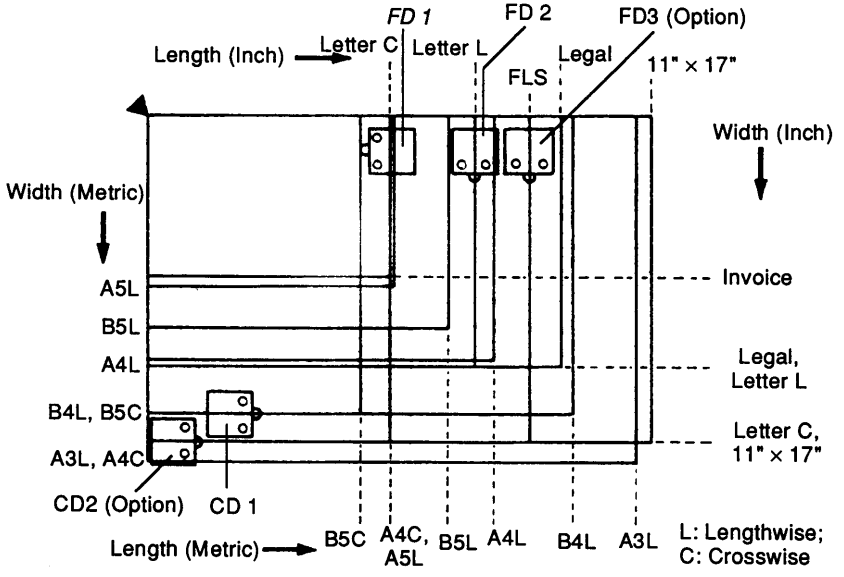



Original Size Detecting Board UN2

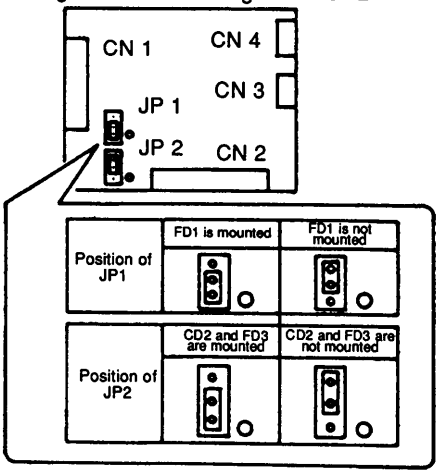

1136M022CA