
20 FUSING UNIT

20-1. Construction and Drive Train

- The Upper Fusing Roller and Lower Fusing Roller together apply heat and pressure to the toner and paper to permanently fix the developed image to the paper. The Cleaning Roller is installed for the cleaning of the Fusing Rollers.



- Drive for the Upper Fusing Roller and Cleaning Roller is transmitted from Main Drive Motor M1 to the Upper Fusing Roller Drive Gear and Cleaning Roller Drive Gear via Timing Belt C and a gear train. The Lower Fusing Roller is driven by the Upper Fusing Roller in contact with it.

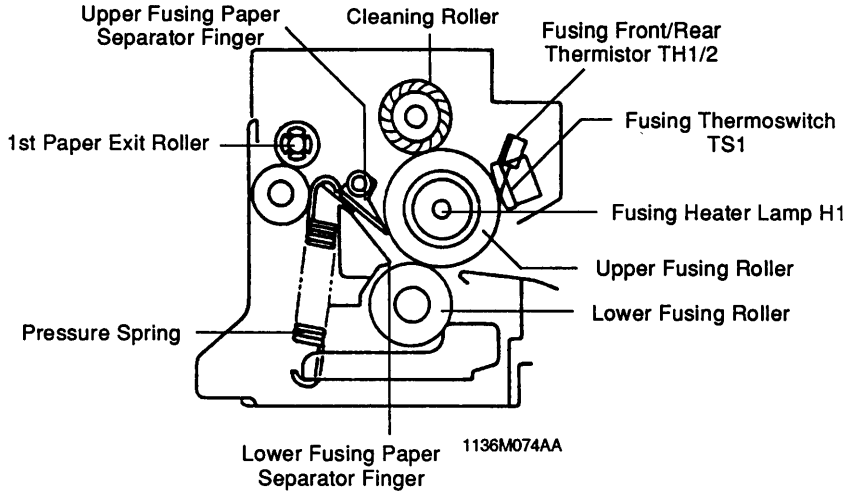