Setting of Tech. Rep. Choice Mode (SCH-00, SCH-02) When the D-102 Is Installed on the Copier

- If the D-102 is fitted to the copier, Tech. Rep. Choice Modes SCH-00 and SCH-02 must be set as follows according to the count-up mode of the D-102.

Count-Up Mode (D-102)	Tech. Rep. Choice Mode (Copier)			
	Plug-In Counter Mode SCH-00		Total Counter Mode SCH-02	
	# of sheets	# of copy cycles	Mode 1	Mode 2
All Size Mode	—	O	O	O
Size Mode I Size Mode II Full Color Mode I Mono Color Mode I Special Mode I	O	—	O	—
2-Sided Mode I 2-Sided Mode II Full Color Mode II Mono Color Mode II Special Mode II	—	O	O	—

O : Setting acceptable
— : Setting inhibited

Note: If a setting is made for the Tech. Rep. Choice Mode where it is inhibited, an error could result in the count data of the D-102.

- SCH-04

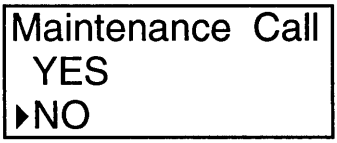

1136S162CA

- SCH-05



1136S123CA

Screen Display	Description
NO	No count
Mode 1	Copy enabled at the end of counting.
Mode 2	Copy disabled at the end of counting.