
1) Select "Passage Sensor".
2) The following screen appears on the Message Display:

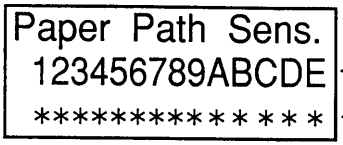

3) By passing paper, the activated state of each Paper Path Sensor changes (1→0) in order of paper passage.
Note: To select the paper port, use the Paper Select Key.

Sensor Code	Sensor Name
1	1st Drawer Paper Take-Up Sensor
2	2nd Drawer Paper Take-Up Sensor
3	3rd Drawer Paper Take-Up Sensor
4	4th Drawer Paper Take-Up Sensor
5	———
6	———
7	Vertical Transport Sensor 3
8	Vertical Transport Sensor 4
9	Transport Roller Sensor
A	Paper Leading Edge Detecting Sensor
B	Paper Exit Switch
C	Duplex Unit Turnover Path Sensor
D	Duplex Unit Paper Entry Sensor
E	Duplex Unit Paper Take-Up Sensor