* C0040

Step	Check Item	Result	Action
1	Is M4 turning at half speed when the copier is in the standby state?	NO	Perform step 3.
2	Perform the following steps to check if M4 speed changes from half to full speed when the Start Key is pressed. (See p. T-3, 4) 1) Port: P6-3 2) Select the function "Port."		
	3) Is the data for P6-3 set to "0"?  1136T103AA	NO	Replace PWB-A.
	4) Does M4 start turning at full speed when the data for P6-3 is changed from "0" to "1"?	NO	Replace M4.
3	Perform the following steps to check the input signal when M4 is turning at half speed (Suction Fan Motor Lock signal). (See p. T-3, 4) 1) Port: P8-7		
	2) Select the function "Port." Is the data for P8-7 set to "L"? 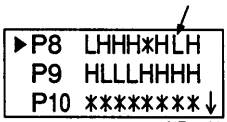 1136T104AA	NO	Replace PWB-A.
		YES	Replace M4.