2-14. C0F30: ATDC Sensor UN4 Failure
C0F31: ATDC Sensor UN4 Failure

Symbol	Name
UN4	ATDC Sensor
PWB-A	Master Board

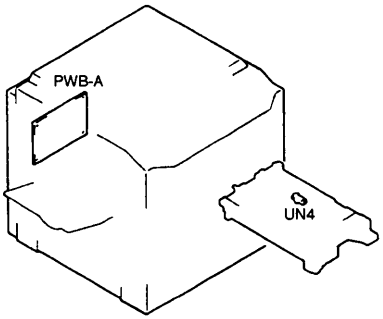

1136T025AA

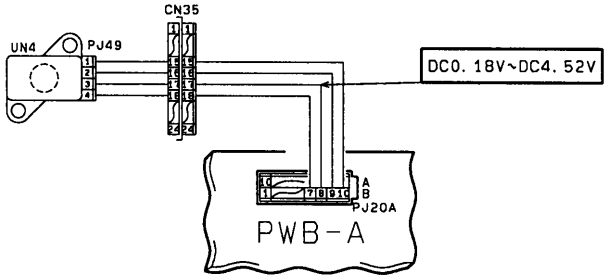

1136C21TAA

Step	Check Item	Result	Action
1	Is the value for "Set" of "ATDC Level" of "Level History" equal to the value given on the Adjust Label?	NO	Enter the value given on the Adjust Label.
2	Is PJ20AB plugged securely into PWB-A?	NO	Plug it in securely.
3	Is CN35 connected securely?	NO	Connect it securely.
4	Is UN4 installed at the correct position?	NO	Install it at the correct position.
5	Is the voltage across PJ20AB-8 on PWB-A and GND in the range between DC0.18V and 4.52V while M1 is turning?	YES	Replace PWB-A.
		NO	Replace UN4.