
(2) Removal of the Paper Take-Up Roll/Feed Roll Assy and Separator Roll Assy

1. Remove the Right Door.
2. Remove two screws and the Paper Guide Plate from each drawer.



3. Unhook the front and rear springs from the copier frame. Remove the Paper Separator Roll/Paper Guide Plate Assy by turning it about 90° in the direction of the arrow.

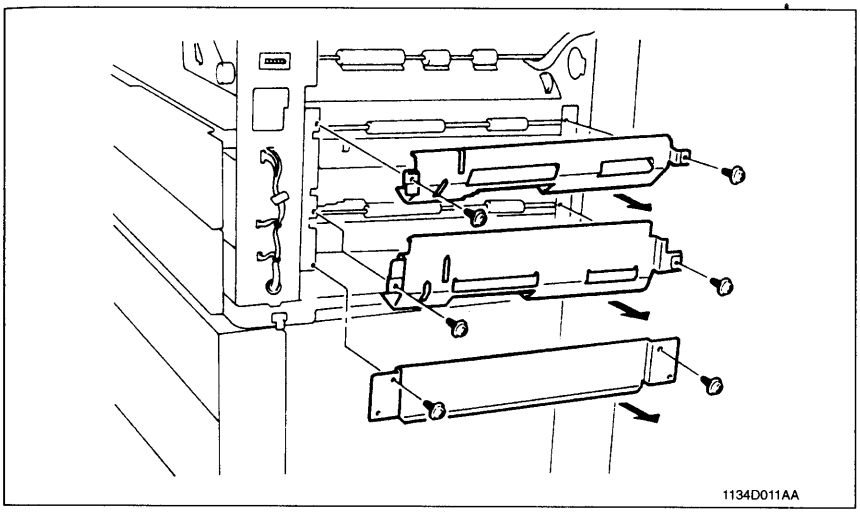