

6. Remove two C-clips from each Paper Take-Up Roll/Feed Roll Assy. (The illustration is for the Paper Take-Up Roll/ Feed Roll Assy for the 2nd Drawer.)

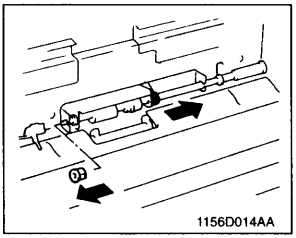

7. Remove the bushing from the front end of each Paper Take-Up Roll/Feed Roll Assy.
8. Remove the rear bushing from the holder.

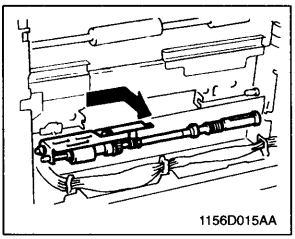

9. Move the coupling holder of each Paper Take-Up Roll/ Feed Roll Assy in the direction of the arrow to work it off the pin of the copier. This allows the Paper Take-Up Roll /Feed Roll Assy to come out of the copier.

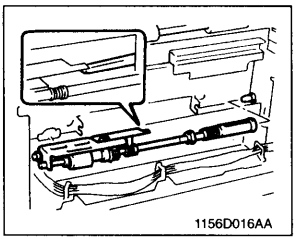

NOTE

When reinstalling the Paper Take-Up Roll/Feed Roll Assy, place it above the Pressure Release Lever.